

Assembly & Installation Instructions

A255

For Ondrian Triple Canopy Four-Light Pendant 13-6315

Page 1 of 3

CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE. We recommend installation by a licensed electrician.

This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.*


Caution: Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.

To Assemble Canopy (Figure 1)

Component Parts

- A Hex Nipple (3)
- B Lock Washer (3)
- C Canopy
- D Canopy Pipe (3)

1. Carefully unpack canopy from carton.
2. Line up end of canopy pipe (D) with hole in canopy (C).
3. Place hex nipple (A) through lock washer (B), down through holes in canopy and thread into canopy pipe. Tighten securely.
4. Repeat steps 2 and 3 for the remaining stems.

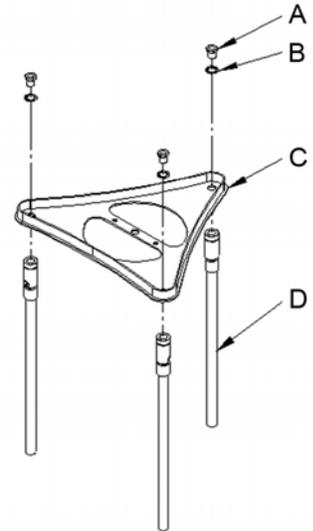


(Figure 1)

Stem Assembly (Figure 1)

Component Parts

- E Fixture Pipe (3)
- F Fixture Coupling (3)

1. Carefully thread fixture pipe (E), threaded end first, over fixture wires.
2. Apply a drop of the supplied thread locking compound to the internal threads of fixture coupling (F) and screw stem into fixture, being careful not to twist or pinch the wires.
Note: Application of the thread locking compound is necessary to prevent the stem from loosening during regular maintenance and cleaning of the fixture. Be certain to apply the compound.
3. See instructions below to complete the installation.

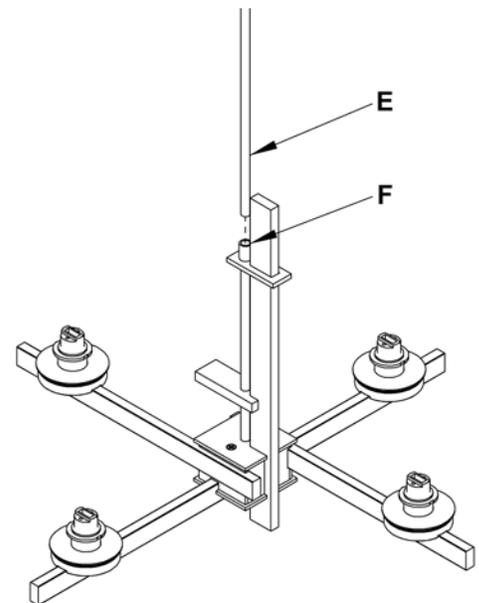

(Figure 2)

(continued)

Assembly & Installation Instructions

For Ondrian Triple Canopy Four-Light Pendant 13-6315


A255

Page 2 of 3

To Assemble and Install Fixture (Figures 3 & 4)


Components

D	Canopy Pipe (3)	L	Lock Up
E	Fixture Pipe (3)	M	Set Screw (3)
G	Crossbar	N	Clutch Sleeve (3)
H	Threaded Studs (2)	O	Clutch (3)
I	Canopy	P	Ground Screw
J	Knurl Ball (2)	Q	Canopy Nipple
K	Canopy Cover		

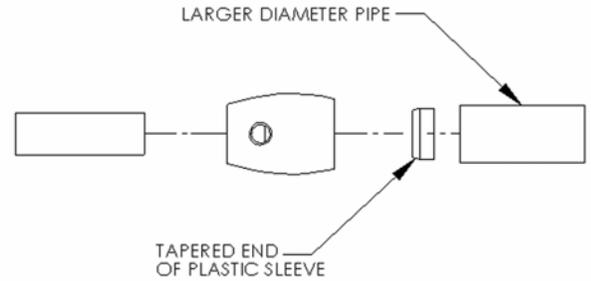

(Figure 3)

1. Carefully unpack fixture from carton.
2. Thread the wires from the fixture pipe (E) into and through the canopy pipe (D) up through the canopy (I).
3. Unscrew the clutch (O) from the canopy pipe (D) slide it across the wires and onto the fixture pipe (E). Follow this with the clutch sleeve (N), so it nests in the clutch (O).
4. Slide the fixture pipe (E) up into canopy pipe (D) as far necessary to give you the total length of the fixture which you desire. Be careful not to scratch the pipe surfaces and to pull excess wire up through the canopy (I). **There must be a minimum 1-1/2" of inner pipe inside the outer pipe.** Hand-tighten the clutch to temporarily hold this adjustment. **At this point the adjustment is not securely fastened; do not depend on it to hold the fixture.**
Important: To ensure full connection strength, be sure the tapered end of the plastic clutch sleeve is oriented toward the clutch when assembled and securely tighten set screw (Figure 3).
5. Thread studs (H) through appropriate holes in the crossbar (G) to match hole centers in canopy (I).
6. Using two machine screws (not provided), fasten the crossbar (G) to the electric box using outer oval slots to orient fixture to desired hanging position.
Note: A new electric box comes with screws. When replacing a fixture, retain the existing screws for use with the new fixture.
7. Slide fixture canopy (I) with fixture attached, over threaded studs (H) and push firmly to ceiling making sure no wires are pinched between fixture canopy and ceiling. Fasten with knurled balls (J). Be sure studs (H) are fully seated in knurled balls (J).
8. Using suitable wire connectors (not provided) connect fixture wires to supply (white to white and black to black). Run a pigtail lead from crossbar ground screw (P) to the junction box and connect all ground wires (bare copper or green to bare copper or green).
Caution: Make sure wire connectors are twisted on securely, and no bare wire is exposed.
9. Check fixtures for height and level.
10. Once the fixtures are fastened to the ceiling, tighten the set screws (M) on the clutches firmly with hex wrench provided. Only after the set screws (M) are tight should you install the glass. Repeat for all three fixtures.

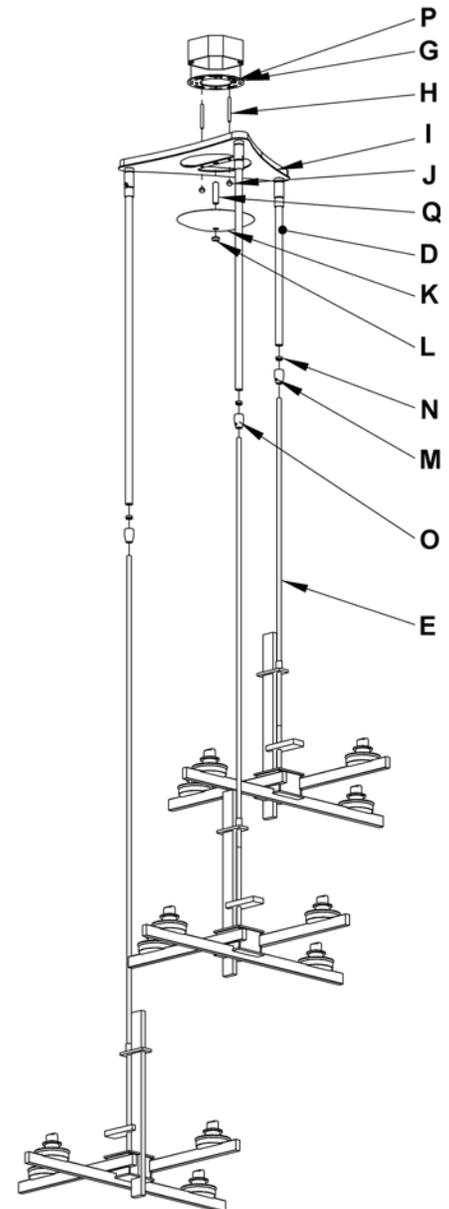

(Figure 4)

(continued)

Assembly & Installation Instructions

For Ondrian Triple Canopy Four-Light Pendant 13-6315

A255

Page 3 of 3


11. Thread canopy nipple (Q) in to threaded hole directly in center of canopy (I).
12. Install canopy cover (K) on canopy nipple (Q).
13. Thread lock up (L) on to canopy nipple (Q). Tighten against canopy cover (K) until snug.
14. Refer to instructions below to install glass.

To Install Glass and Bulb (Figure 5)

Component Parts

- R Socket (12)
- S Bulb (Included)(12)
- T Glass (12)
- U Spacer (12)
- V Retaining Ring (12)
- W Socket Tool

1. Remove retaining rings (V) and spacers (U) from sockets (R). *Parts are shipped installed on sockets. Save for later use.*
2. Install light bulbs (S). Be careful not to touch bulb with bare hands; oil from the hands will dramatically reduce bulb life.
3. Slip glass (T) over socket (R).
4. Slip spacer (U) over socket (R) so it rests on glass (T).
5. Thread retaining ring (V) onto socket (R) using provided socket tool (W). *Be careful not to over tighten.*
6. Repeat steps 3 thru 5 for all arms.
7. Restore electricity at main breaker.

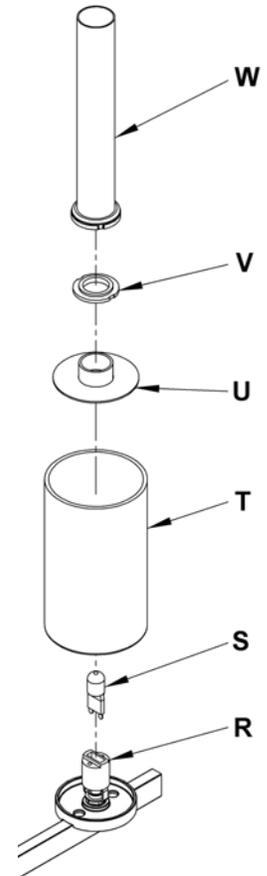

(Figure 5)

If you need further assistance, or find that you are missing any parts, please contact the dealer from which you purchased this product. We hope you enjoy your fixture!

* Hubbardton Forge will not be liable for injury or damage caused by improper installation, lamping or use of this fixture.