

# Assembly & Installation Instructions

A374

For Arbo Pendant 136620

Page 1 of 2

**CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE.** We recommend installation by a licensed electrician. This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.\*

Caution: Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.

**Pease Note:** After installation extra hardware and accessories are possible due to our kits are used on multiple products and options.

## To Complete Fixture Assembly (Figures 1 & 2)

### Component Parts

A Fixture Pipe	F Knurled Balls (2)
B Canopy	G Canopy Pipe
C Crossbar	H Plastic Clutch Sleeve
D Ground Screw	I Clutch
E Threaded Stud (2)	J Set Screw



**CAUTION:** BE SURE POWER IS OFF AT THE MAIN BREAKER BOX PRIOR TO INSTALLATION.

1. Thread the wires from the fixture pipe (A) into and through the canopy pipe (G) up through the canopy (B).
2. Unscrew the clutch (I) from the fixture pipe (A); slide it across the wires and onto the canopy pipe (A). Follow this with the plastic clutch sleeve (H), oriented so the tapered end of the clutch sleeve nests in the clutch (Figure 1).
3. Slide the canopy pipe (G) as far as necessary to give you the total length of the fixture which you desire. Be careful not to scratch the pipe surfaces and to pull excess wire up through the canopy pipe (G). Screw clutch (I) onto fixture pipe (A). There must be a minimum 1-1/2" of inner pipe inside the outer pipe. Hand-tighten the clutch to temporarily hold this adjustment. The clutch is not securely fastened at this point; do not depend on it to hold the fixture.

**Important:** To ensure full connection strength, be sure the tapered end of the plastic clutch sleeve is oriented toward the clutch when assembled and securely tighten set screw (Figure 1).

4. Thread studs (E) through appropriate holes in crossbar (C) to match holes in canopy (B).
5. Using two machine screws (not provided), fasten the crossbar (C) to the electric box.

**Note:** A new electric box comes with screws. When replacing a fixture, retain the existing screws for use with the new fixture.

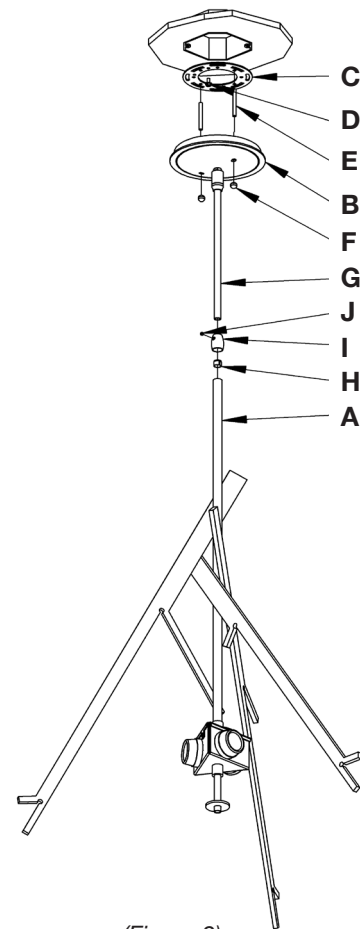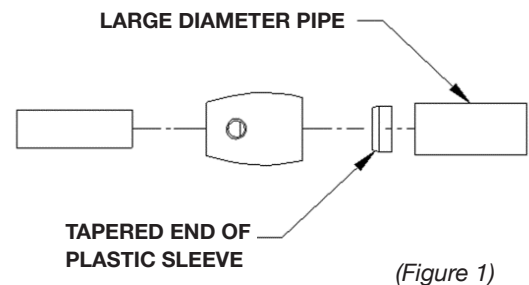

(Continued)

If you need further assistance, or find that you are missing any parts, please contact the dealer from which you purchased this product. We hope you enjoy your fixture!

\* Hubbardton Forge will not be liable for injury or damage caused by improper installation, lamping or use of this fixture.

# Assembly & Installation Instructions

A374


For Arbo Pendant 136620

Page 2 of 2

## To Complete Fixture Assembly (Figures 1 & 2)

(Continued)

- Using suitable wire connectors (not provided) connect fixture wires to supply (white to white and black to black). Run a pigtail lead from ground screw (D) to the junction box and connect all ground wires (bare copper or green to bare copper or green). Caution: Make sure wire connectors are twisted on securely, and no bare wire is exposed.
- Slide canopy (B) over threaded studs (E) and push firmly to ceiling, making sure that no wires are pinched between fixture canopy and ceiling. Fasten with knurled balls (F). Be sure studs (E) are fully seated in the knurled balls (F).
- Once the fixture is fastened to the ceiling, tighten the set screw (J) in clutch (I) firmly with hex wrench provided. Only after the set screw (J) is tight should you install the glass.
- Refer to instructions following to install shade and diffuser.

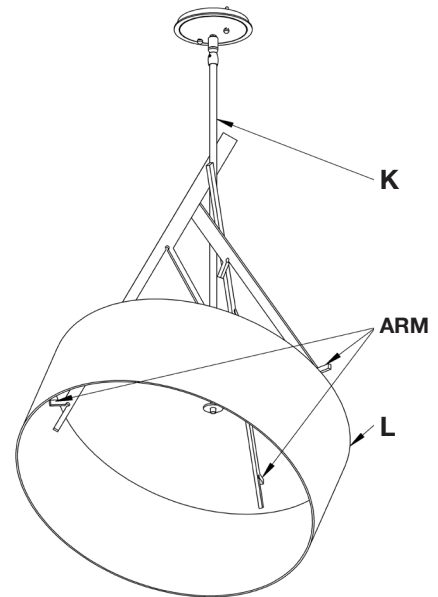


(Figure 3)

## To Install Shade & Diffuser (Figures 3 & 4)

### Component Parts

- K Fixture
- L Shade
- M Threaded Pipe
- N Diffuser
- O Flanged Washer
- P Cap

- Install bulbs (not included).
- Remove flanged washer (O) and cap (P) from threaded pipe (M) and save for later use. Parts ship installed.
- Rotate shade (L) around 3 arms of fixture (K) and position the shade (L) so it set level on the arms. (Figure 3)
- Lift diffuser (N) up to washer on threaded 4 pipe (M). Align slots in diffuser (N) with arms on fixture (K).
- Slip flanged washer (O) onto threaded pipe (M) and secure diffuser (N) with cap (P). (be careful not to over tighten)
- Restore electricity at the main breaker.

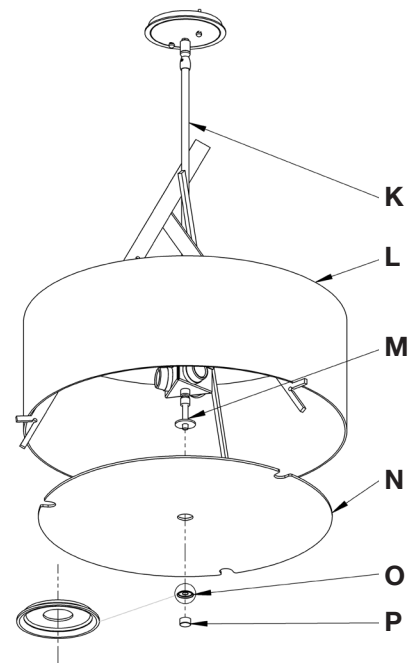

Correct Washer Orientation

(Figure 4)

If you need further assistance, or find that you are missing any parts, please contact the dealer from which you purchased this product. We hope you enjoy your fixture!

\*Hubbardton Forge will not be liable for injury or damage caused by improper installation, lamping or use of this fixture.